


NanoVNA Menu Structure Map

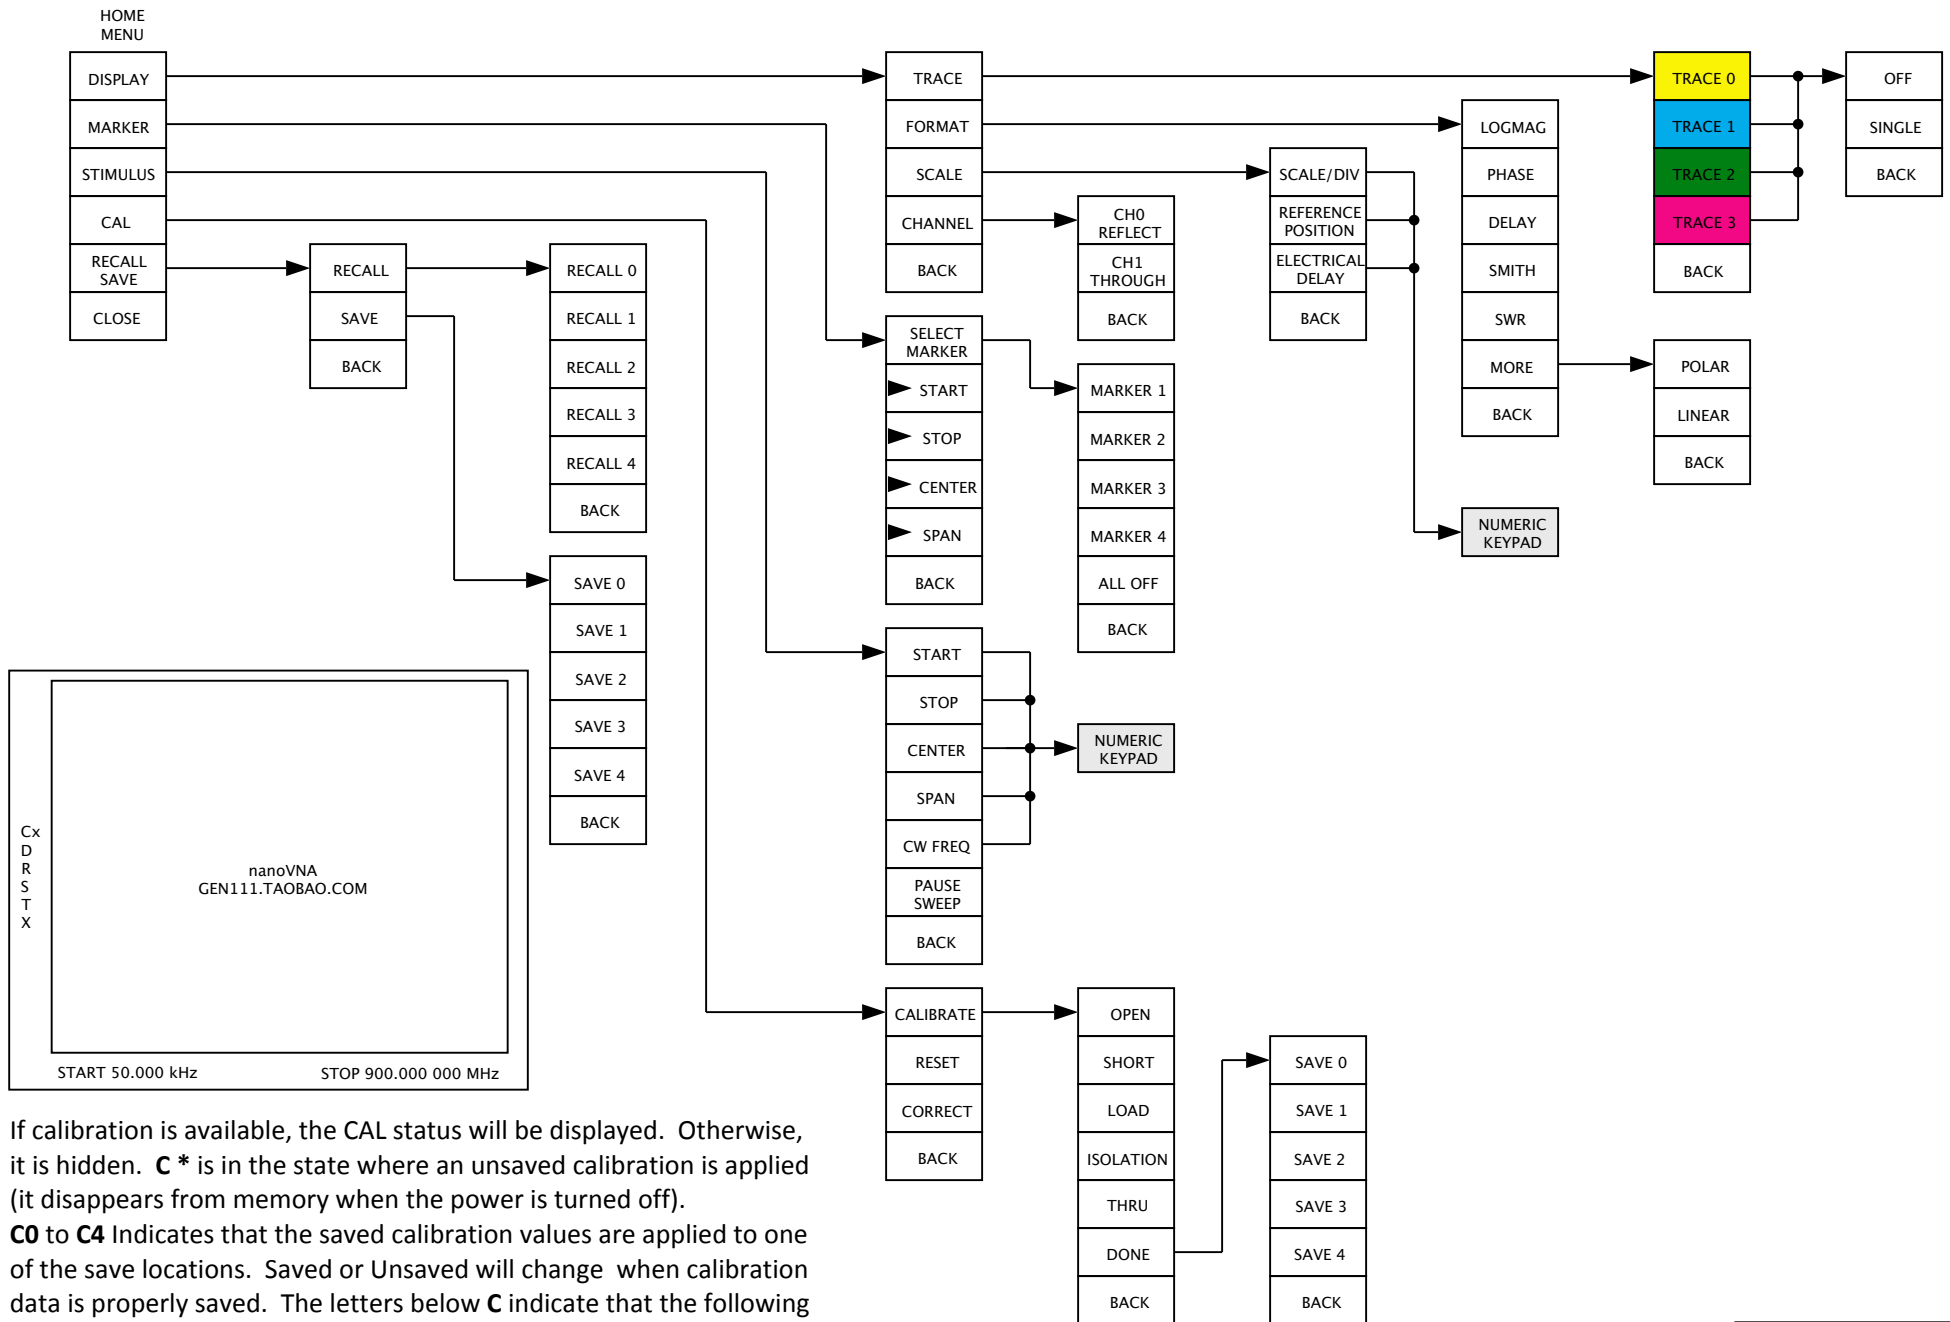

If calibration is available, the CAL status will be displayed. Otherwise, it is hidden. **C *** is in the state where an unsaved calibration is applied (it disappears from memory when the power is turned off).

C0 to **C4** Indicates that the saved calibration values are applied to one of the save locations. Saved or Unsaved will change when calibration data is properly saved. The letters below **C** indicate that the following error terms have been applied. **D**: Directivity, **R**: Reflection Tracking, **S**: Source Match, **T**: Transmission Tracking and **X**: Isolation